

Zirkon zahn

Porcelain Chipping

Veneer porcelain chipping is most frequently caused by inadequate finish following occlusal adjustments as illustrated below:

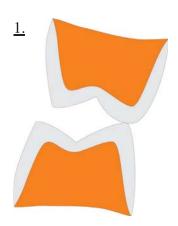


Occlusal high spot in need of adjustment

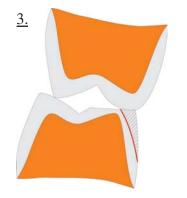

Square edge corner created by adjustment poses risk of chipping




Adjustment carried out

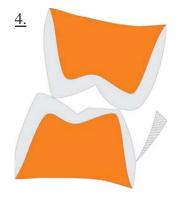

Part of veneer porcelain flakes off



Adjustment carried out

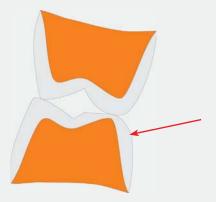

It is imperative to round off & polish the adjusted area in order to prevent chipping